



SANTA BARBARA ONE-DESIGN
- CABIN PLAN - '67

Produced by *Blowhard*
P.O. BOX 3772
SANTA BARBARA, CALIF. 93103

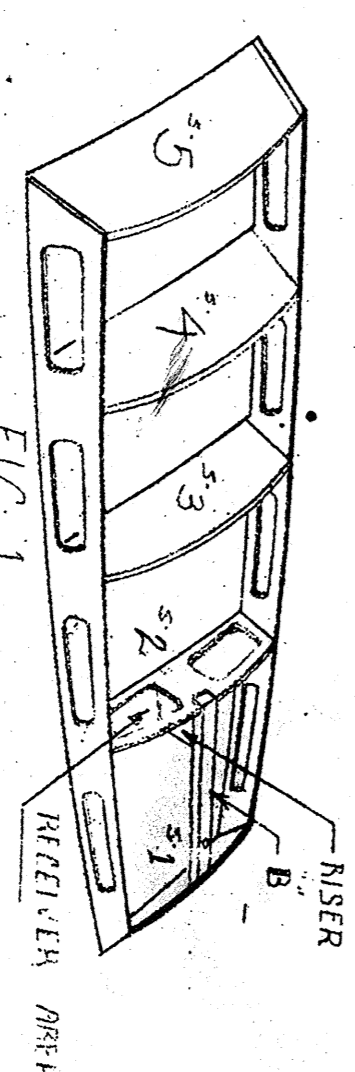

S-2 IS LOCATED DIRECTLY OVER THE SECOND DECK BEAM. (30" FROM THE BOW) INSTALL A RISER BETWEEN B & THE DECK TO CARRY THE MAST LOAD. S-4 & S-3 ARE REMOVED AFTER COMPLETION OF CABIN.

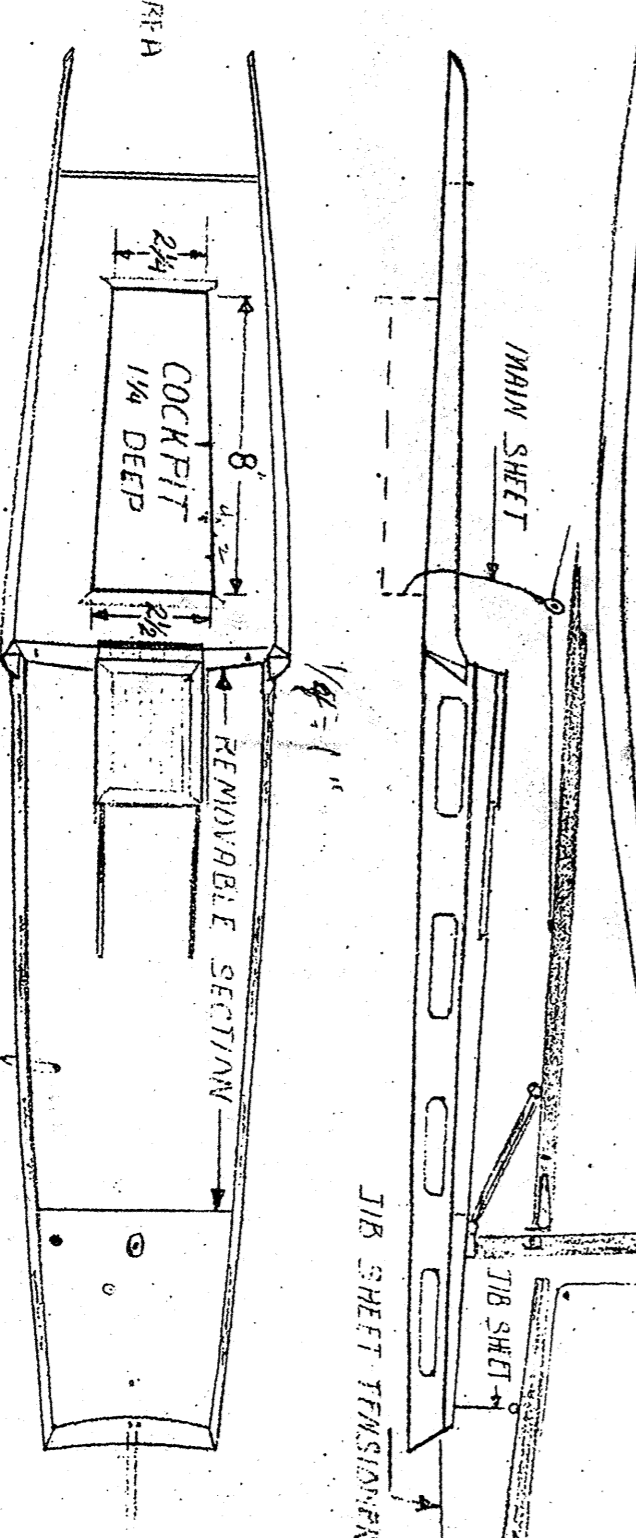

THE COCKPIT IS BUILT UP AS A BOX. WHEN INSTALLED, COVER ANY ENDS GRUBS THAT MIGHT SHOW WITH THE MAHOG. TAPE.

THE BOTTOM OF THE MAST SHOULD BE CUT OFF EQUAL TO THE HEIGHT OF THE CABIN. TO STAY WITHIN THE MAXIMUM CLASS LIMITS.